



Projecteur TECO LED LUMI 20W/30W/50W 3CCT IP66 LUMI TECO LED Straler 20W/30W/50W 3CCT IP66 TECO LED- Strahler LUMI 20W/30W/50W 3CCT IP66 TECO LED LUMI projector 20W/30W/50W 3CCT IP66

LAMP BEADS DIAGRAM


3000K CCT

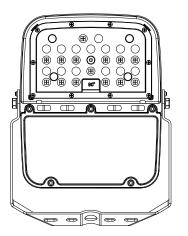

5000K CCT

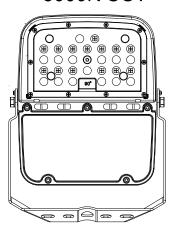


4000K CCT

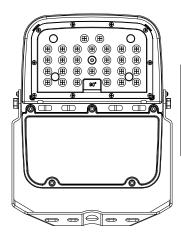


Remark:


- 1. The product is 3 color temperature Switchable.
- 2.Three picture represents the LED number of lights corresponding to the color temperature.

PACKAGE CONTENTS

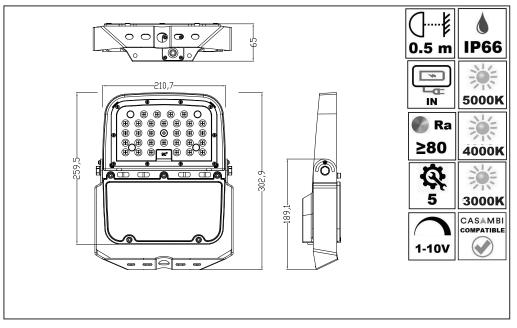

Beam-angle: TYPE 5 - 90° x 90°

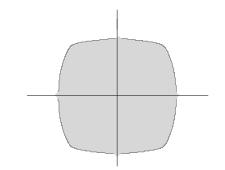

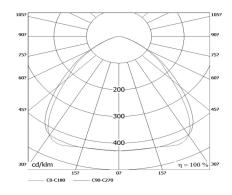



↑ SAFETY INFORMATION

WARNING: Risk of Fire, Electrical Shock, Cuts or other Casualty Hazards- Installation and maintenance of this product must be performed by a qualified electrician. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and hazards involved.

WARNING: To reduce risk of fire, electric shock, or injury to persons.

- Risk of Fire and Electric Shock- Make certain power is OFF before starting installation or attempting any maintenance. Disconnect power at fuse or circuit breaker.
- Risk of Burn- Disconnect power and allow fixture to cool before handling or servicing.
- Suitable for wet location and operation in temperatures not exceeding 50°C
- For use in 220-240Vac application.
- Replace the lens if damaged.
- There are no serviceable parts inside the fixture.
- Risk of Personal Injury- Fixture may become damaged and/or unstable if not installed properly. Failure to comply with these instructions may result in death, serious bodily injury and property damage.

 
SAVE THESE INSTRUCTIONS. For safest operation, read and become familiar with complete installation instructions prior to use. Pay close attention to this manual and stay within its guidelines when using this product.

CAUTION:

- All parts must be used as indicated in this manual. Do not substitute any parts, leave parts out, or use parts that are worn out or broken.
- LEDs emit bright light. Avoid looking directly at the light source.


PREPARATION

Before beginning assembly, installation, or operation of product, make sure all parts are present. Compare parts with package and hardware contents list on page 1. If parts is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.




INSTALLATION INSTRUCTIONS

1. Mount fixture to surface according to the hole pattern (Fig.1).

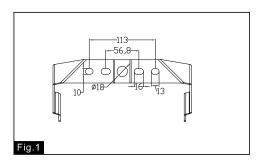

2.Loosen screw and adjust the fixture to a desired illumination angle, then tighten screw(Fig.2).

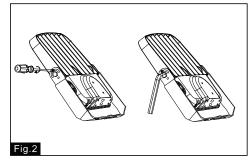

WATTAGE AND CCT SWITCHABLE

The fixture is equipped with three working wattage options, 20W/30W/50W with three working CCT options: 3000K/4000K/5000K. The default setting in CCT 4000K and Power 50W. To change it, please follow the steps below:

- 1. Remove the cover by screwdriver (Fig.3).
- 2. Set the switch to the corresponding wattage and CCT (Fig.4).
- 3. Put the cover back and tighten it by screwdriver (Fig.5).

